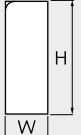
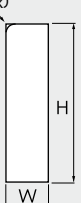
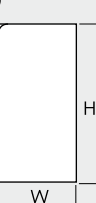
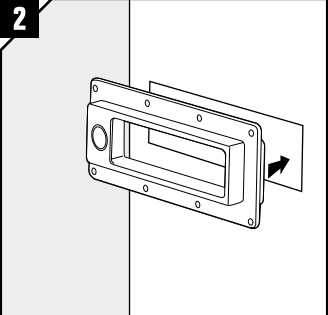
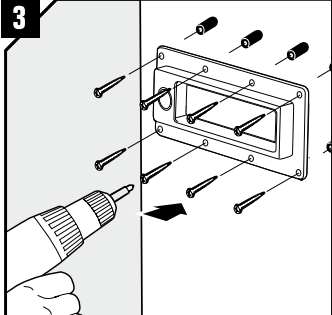
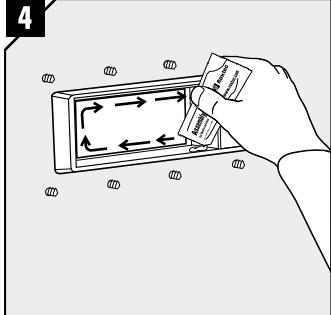
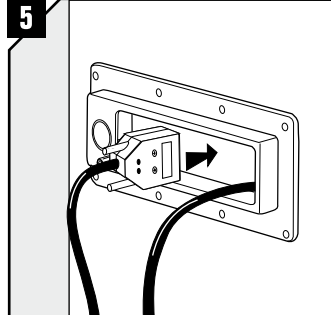


Assembly Instruction
 Roxtec ComSeal 10,
 Roxtec ComSeal 16,
 Roxtec ComSeal 32

Roxtec ComSeal 10, 16 and 32 Installation

1										
ComSeal 10 Hole dimensions										
	<table border="1"> <thead> <tr> <th></th> <th>(mm)</th> <th>(in)</th> </tr> </thead> <tbody> <tr> <td>H</td> <td>149±1</td> <td>5.866±0.039</td> </tr> <tr> <td>W</td> <td>56±1</td> <td>2.204±0.039</td> </tr> </tbody> </table>		(mm)	(in)	H	149±1	5.866±0.039	W	56±1	2.204±0.039
	(mm)	(in)								
H	149±1	5.866±0.039								
W	56±1	2.204±0.039								
										
ComSeal 16 Hole dimensions										
	<table border="1"> <thead> <tr> <th></th> <th>(mm)</th> <th>(in)</th> </tr> </thead> <tbody> <tr> <td>H</td> <td>209±1</td> <td>8.228±0.039</td> </tr> <tr> <td>W</td> <td>56±1</td> <td>2.204±0.039</td> </tr> </tbody> </table>		(mm)	(in)	H	209±1	8.228±0.039	W	56±1	2.204±0.039
	(mm)	(in)								
H	209±1	8.228±0.039								
W	56±1	2.204±0.039								
										
ComSeal 32 Hole dimensions										
	<table border="1"> <thead> <tr> <th></th> <th>(mm)</th> <th>(in)</th> </tr> </thead> <tbody> <tr> <td>H</td> <td>209±1</td> <td>8.228±0.039</td> </tr> <tr> <td>W</td> <td>103±1</td> <td>4.055±0.039</td> </tr> </tbody> </table>		(mm)	(in)	H	209±1	8.228±0.039	W	103±1	4.055±0.039
	(mm)	(in)								
H	209±1	8.228±0.039								
W	103±1	4.055±0.039								
										

Cut a rectangular opening for the frame, according to the tables above.


2 	3 	4 	5 
--	---	--	---

Insert the frame into the opening.


Attach the frame firmly, using the enclosed selftapping screws and protection caps.

Lubricate the inside surfaces of the frame with Roxtec Assembly Gel, especially in the corners.


Insert the cables through the frame.

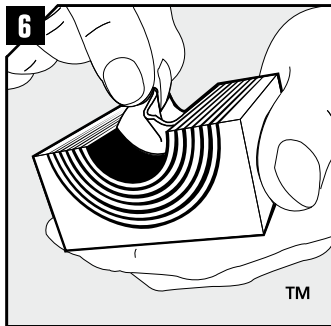


Adapt the modules, which are to hold cables or pipes. Peel layers until you achieve the gap seen in pic. 7.

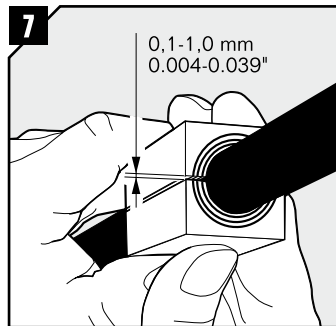


Achieve a 0.1-1.0 mm gap between the two halves when held against the cable.

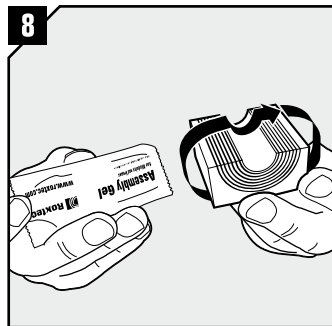

Lubricate all modules thoroughly, both on the inside and the outside surfaces, before installation.

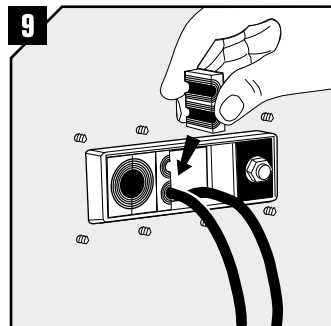

Insert the modules from the back of the frame opening and according to the installation plan (Packing Plan). If possible, start with the largest modules first.

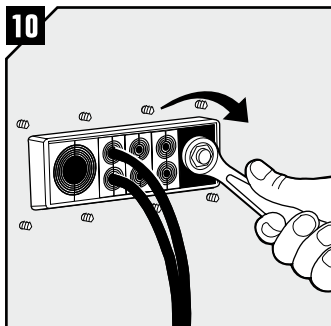

Tighten the compression unit firmly to seal the frame. A good indication is when the assembly gel squeezes out between the modules.

Disassembly instruction

Reverse order

Note

- For optimum reliability, wait 24 hours or longer after installation before exposing the cables/pipes to strain or pressure.
- To be used together with CM modules.
- To simplify installation of Roxtec ComSeal 32, we recommend filling both openings before tightening the compression units.
- Try to rout cables straight through the frame.

DISCLAIMER

"THE ROXTEC CABLE ENTRY SEALING SYSTEM ("THE ROXTEC SYSTEM") IS A MODULAR BASED SYSTEM OF SEALING PRODUCTS CONSISTING OF DIFFERENT COMPONENTS. EACH AND EVERY ONE OF THE COMPONENTS ARE NECESSARY FOR THE BEST PERFORMANCE OF THE ROXTEC SYSTEM. THE ROXTEC SYSTEM HAS BEEN CERTIFIED TO RESIST A NUMBER OF DIFFERENT HAZARDS. ANY SUCH CERTIFICATION, AND THE ABILITY OF THE ROXTEC SYSTEM TO RESIST SUCH HAZARDS, IS DEPENDENT ON ALL COMPONENTS THAT ARE INSTALLED AS A PART OF THE ROXTEC SYSTEM. THUS, THE CERTIFICATION IS NOT VALID AND DOES NOT APPLY UNLESS ALL COMPONENTS INSTALLED AS PART OF THE ROXTEC SYSTEM ARE MANUFACTURED BY OR UNDER LICENSE FROM ROXTEC ("AUTHORIZED MANUFACTURER"). ROXTEC GIVES NO PERFORMANCE GUARANTEE WITH RESPECT TO THE ROXTEC SYSTEM, UNLESS (I) ALL COMPONENTS INSTALLED AS PART OF THE ROXTEC SYSTEM IS MANUFACTURED BY AN AUTHORIZED MANUFACTURER AND (II) THE PURCHASER IS IN COMPLIANCE WITH (A), AND (B), BELOW.

(A) DURING STORAGE, THE ROXTEC SYSTEM OR PART THEREOF, SHALL BE KEPT INDOORS IN ITS ORIGINAL PACKAGING AT A TEMPERATURE NOT EXCEEDING +70°C/158°F AND NOT BELOW -40°C/-40°F.

(B) INSTALLATION SHALL BE CARRIED OUT IN ACCORDANCE WITH

ROXTEC ASSEMBLY INSTRUCTION IN EFFECT FROM TIME TO TIME.

THE PRODUCT INFORMATION PROVIDED BY ROXTEC DOES NOT RELEASE THE PURCHASER OF THE ROXTEC SYSTEM, OR PART THEREOF, FROM THE OBLIGATION TO INDEPENDENTLY DETERMINE THE SUITABILITY OF THE PRODUCTS FOR THE INTENDED PROCESS, INSTALLATION AND/OR USE.

ROXTEC GIVES NO GUARANTEE FOR THE ROXTEC SYSTEM OR ANY PART THEREOF AND ASSUMES NO LIABILITY FOR ANY LOSS OR DAMAGE WHATSOEVER, WHETHER DIRECT, INDIRECT, CONSEQUENTIAL, LOSS OF PROFIT OR OTHERWISE, OCCURRED OR CAUSED BY THE ROXTEC SYSTEMS OR INSTALLATIONS CONTAINING COMPONENTS NOT MANUFACTURED BY AN AUTHORIZED MANUFACTURER.

ROXTEC EXPRESSLY EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ALL OTHER EXPRESS OR IMPLIED REPRESENTATIONS AND WARRANTIES PROVIDED BY STATUTE OR COMMON LAW. USER DETERMINES SUITABILITY OF THE ROXTEC SYSTEM FOR INTENDED USE AND ASSUMES ALL RISK AND LIABILITY IN CONNECTION THEREWITH. IN NO EVENT SHALL ROXTEC BE LIABLE FOR CONSEQUENTIAL, PUNITIVE, SPECIAL, EXEMPLARY OR INCIDENTAL DAMAGES."



Roxtec International AB
 Box 540, 371 23 Karlskrona, SWEDEN
 PHONE +46 455 36 67 00, FAX +46 455 820 12
 EMAIL info@se.roxtec.com, www.roxtec.com